



Learn to Read a Propane Tank Gauge

The gauge on a propane tank is located under the dome (lid) of the tank.

The gauge displays the percentage of propane in the tank.

Reading the gauge is very simple.

Lift the lid, and take the number reading on the tank

Pictured are two types of propane tank gauges for reference.

If the gauge shows 30% or LESS, call our office to arrange for a propane delivery.

The tank is full at 80% as the gas needs room for expansion.

